



DIRECTV

Possible Codes: (For DirecTV branded equipment)

DIRECTV VCR	2253
DIRECTV Satellite	3040 3041 3042 3043 3044 3045 3046 3049 3051 3054 3055 3062 3063 3078 3079 3080 3081 3083 3129 3130 3132 3135
DIRECTV DVR	5000 5002 5004 5007 5008 5010

Key Functions

(Some functions may only be available on models with HD or DVR functionality)

Menu - Show DirecTV main menu

Guide - Show program guide screen

Info - Show Information about current show

List - Show Playlist of recorded programs

Rec - Record the current show or guide item

Exit - Exit any menu screen and return to Live TV

Red, Green, Yellow, Blue - These buttons function as shortcuts. The colored buttons act the same with Blu-Link™ as they do on the DirecTV remote. Look for short cuts on menus and on the guide.

Replay - Skip back 6 seconds

Skip - Skip forward 30 seconds

Aspect - Change which HD format is displayed