



Dish Network

Possible Codes: (For Dish / Echostar branded equipment)

3034 3035 3036 3037 3047 3131 3133 3138 3139 5009 3159

Key Functions

(Some functions may only be available on models with HD or DVR functionality)

Menu - Show Dish main menu

Guide - Show program guide screen

Info - Show Information about current show

List - Show Playlist of recorded programs

Rec - Record the current show or guide item

Exit - Exit any menu screen and return to Live TV

Red, Green, Yellow, Blue - These buttons function as shortcuts. The colored buttons act the same with Blu-Link™ as they do on the DirecTV remote. Look for short cuts on menus and on the guide.

Replay - Skip back 6 seconds

Skip - Skip forward 30 seconds

Aspect - Change which HD format is displayed

